

BOLEX AUTOMATIC SELFTIMER



INSTRUCTIONS FOR USE

An ideal accessory for "getting yourself into the picture".

The **BOLEX Automatic Selftimer** starts the camera running 6 seconds after the timing mechanism has been set and enables to vary the length of the scene from 5 to 20 seconds.

The Bolex Automatic Selftimer can be used on the following Bolex movie cameras as well as on other makes with a cable release socket. It fits into the cable-release socket by means of one of the adapters shown below.




BOLEX AUTOMATIC SELFTIMER



If you use the automatic selftimer on a Paillard-Bolex H16 or H8 camera, you have to adjust the length of the slide-rail (t) (see instruction booklet) according to the socket model on which the adapter is screwed.

Socket model

The slide-rail (t) must project approximately :

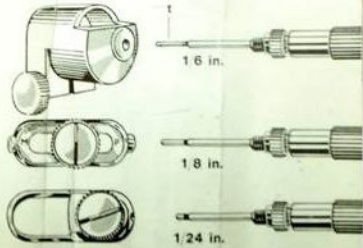

Suppl. M.E. 521.26 Anglais

2. Verify that the Selftimer cable is functioning correctly

when the knob (E) is "out" — it automatically moves into this position when the spring motor has run down.

To do this :

Press the release button (P). If your release cable is correctly adjusted, the camera should start running. If it does not, the length of the slide-rail (t) must be altered in the manner indicated in the instructions.

At any time during filming you can use the Selftimer cable without its automatic mechanism, all you need do is to make sure that the knob (E) is in the "out" position described above, before pressing the release button.



1. Mounting the Bolex Selftimer on the camera

If you have one of the small Bolex 8mm camera, type B, C or D :

- screw the adapter N° 2 onto the shutter release cable
- loosen the lock-nut (c) and adjust the ring (b) so that the slide-rail projects approximately one-sixteenth of an inch beyond the edge of the adapter
- tighten the lock-nut (c)
- screw the shutter release cable into the appropriate socket on the camera.



If you have an H16 or an H8 Bolex camera

- first fit the special socket to the shutter release on the front or side of your camera. This socket is available as a separate attachment (ref. CLOIC or CLOHE)

- screw the adapter N° 1 onto the shutter release cable
- loosen the lock-nut (c) and adjust the ring (b) so that the slide-rail (t) projects approximately one-sixteenth of an inch beyond the edge of the adapter
- tighten the lock-nut (c)
- screw the cable release into the front socket (A).

Perfect shutter release action cannot be guaranteed on cameras with serial numbers below :

H16S, H16T, H16M : 172.691

H16RX : 172.501

H8 S or H8 RX : 173.021.

If your camera is of an other make

screw the adapter N° 2 or 3 whichever fits your camera onto the cable release, and adjust the length of the cable release as described above.

Some cameras have release mechanisms which enable the Bolex Selftimer to be used without an adapter.